



QUICK REFERENCE CARD ★



The **DIVISION** Toggle Switch is used to switch between Clock division and Frequency division.

The **SPLIT** Toggle Switch is used to switch between 9 divisions or doubling the divisions.

The **TRIG/GATE** Toggle Switch is used to set the Outputs to follow the Clock signal or enable a variable Gate length.

The **GATE LENGTH** knob is used to set the gate length between 5% and 95% of the clock length.

The **LENGTH CV** Input Jack is used to adjust the Gate Length via CV. Allowable CV values are 0VDC [5%] to 10VDC [95%].

3U, 4HP, 29mm Deep
 +12VDC = 0mA, -12VDC = 0mA
 +5VDC = 0mA

TSYKLON LABS